


VALVE DESCRIPTION CODE

S25 111-016-150

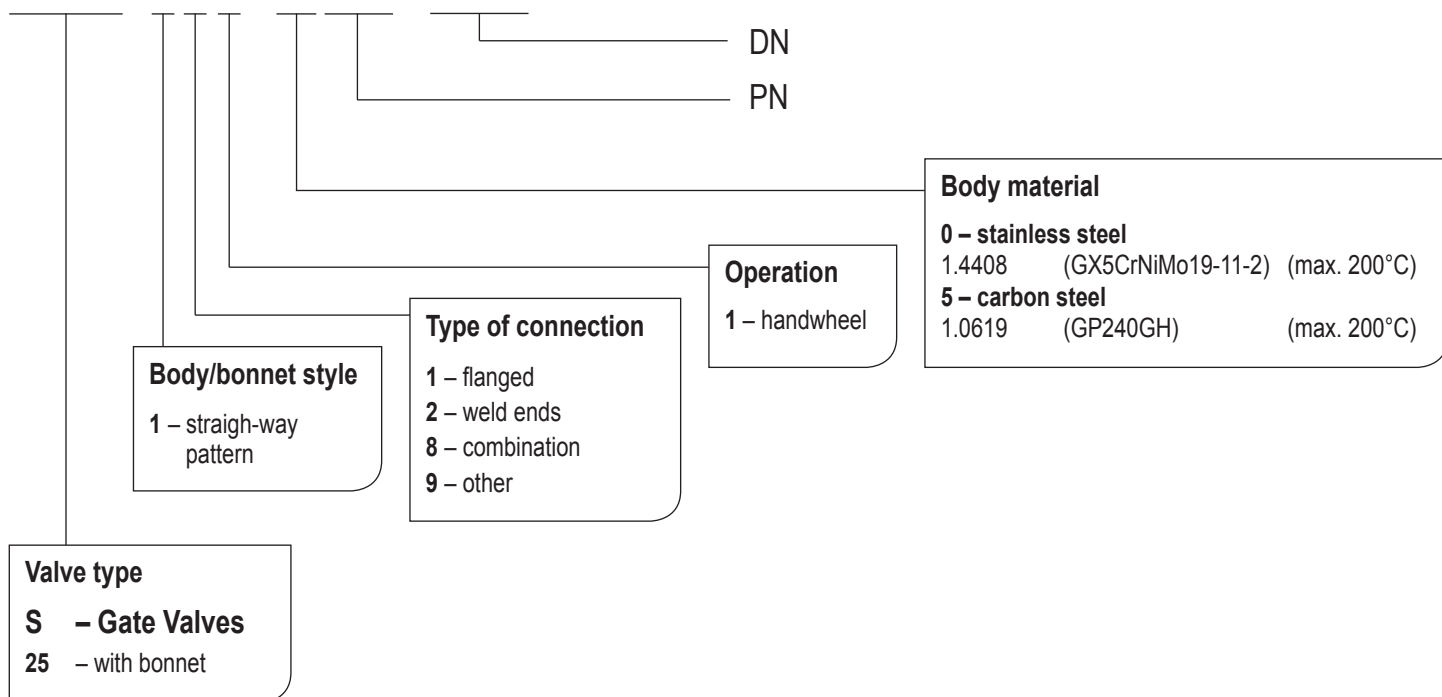

VALVE INSTALLATION

The recommended valve position is with the stem and the control elements perpendicular upwards or with the stem tilted max. about 90 degrees to the horizontal plane.

Assembly with hanging stem is not permitted.

It is necessary to consider the following points during assembly and operation:

- operating conditions must comply with operating parameters of the valve
- proper function of the valve is affected by the presence of impurities in the pipeline and flowing medium, therefore it is necessary keep working environment a pipeline clean, for example with using filters
- medium used must comply with the corrosion resistance of the valve material
- use of mechanically damaged valves during the operation is prohibited

The service life of valves significantly extends regular maintenance and minor repairs carried out by trained personnel.